


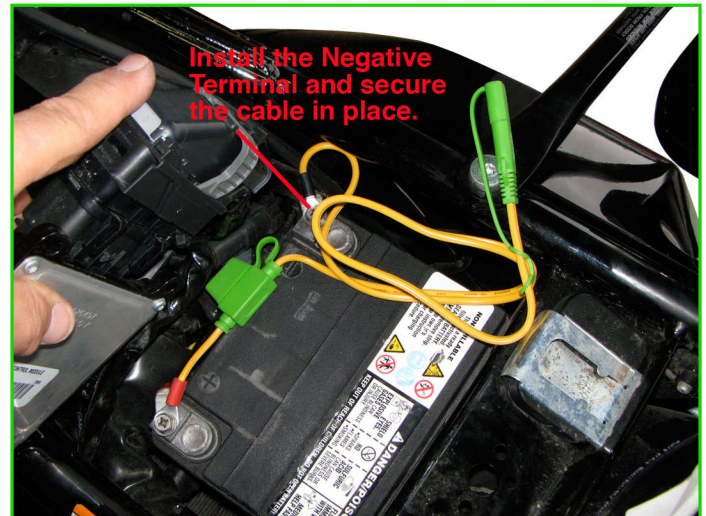


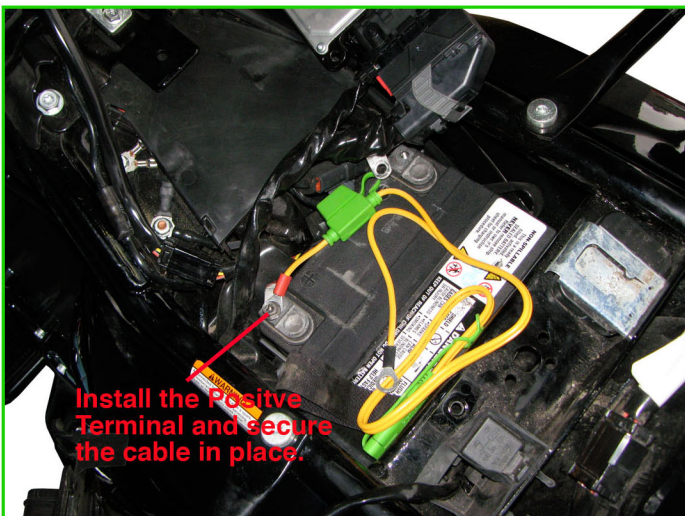

Remove the Negative (ground) Terminal first. Then remove the **Positive** Terminal and attach the **RED** terminal connector and reattach the **Positive** Terminal. Finally attach the Negative connector and reconnect the Negative Terminal. Removing the Negative first and reconnecting it last eliminates the possibility of shorting the **Positive**.

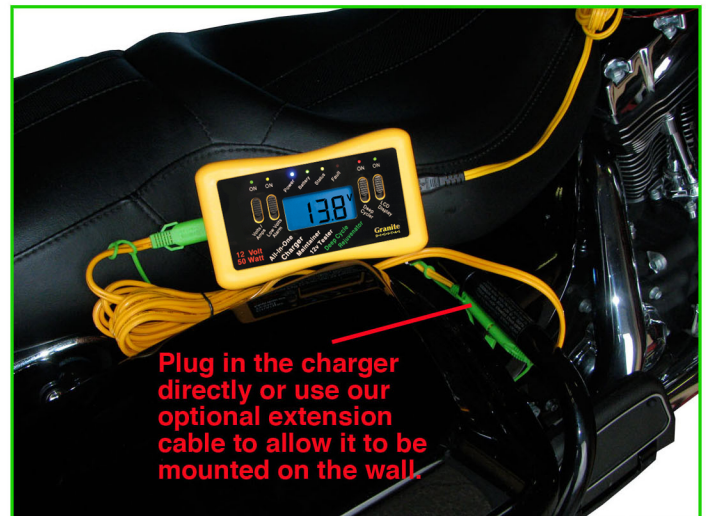

Securely fasten both terminals and route the cable so that the seat or other parts don't pinch the wires. The in-line fuse protects the wire should it become shorted but do take the time to prevent any chaffing or crushed wires from occurring when reassembly is done.

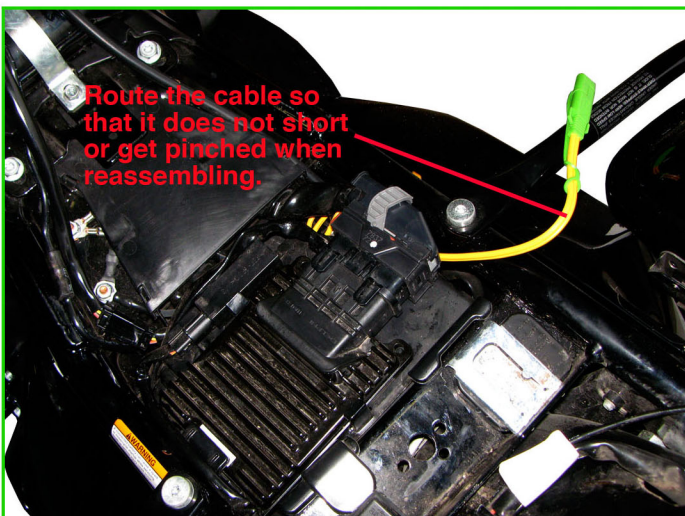

After the cable is routed to a location that will be easy to reach, use the two loops that are on the green connector to tie down the cable. The loops provide an easy attachment point for the cable end. Plug the cable into the charger or the optional extension cable and the charger will do the rest.